



REPLACING PELICAN LATCHES

Please see link below for instructions on replacing latches.

<https://www.peli.com/eu/en/discover/videos/how-to-change-a-peli-case-latch/>

PINS WITH BOTH SIDES VISIBLE

1. Starting with the latch closed, use a flat head punch and a hammer to hit the head of the latch pin with force. If you don't have a flat head punch to hand, a small Phillips head screwdriver, or even the new replacement pin will work just as well.



2. Repeat this process until the serrated end of the pin pops out at the opposite side of the latch as pictured above.
3. Use pliers to grip the serrated end of the pin and hammer them gently to remove the pin from the latch rib. Lift the latch to remove it.

PINS WITH ONE SIDE VISIBLE

1. If your latch pin only has one visible side, hammer the punch until the pin is flush with the latch rib at the opposite side, but not sticking out.
2. Lift the latch and pull it away from the latch rib to remove it.



INSTALLING THE NEW LATCHES

1. Place the new latch onto the lid and insert the latch pin smooth end first.
2. Use the pliers and hammer to drive the pin until it rests flush with the surface of the latch rib.



3. Your case should now be restored back to its former glory!