


# PANEL FRAME MOUNTING INSTRUCTIONS

1500 PROTECTOR CASE

## Kit Includes:

- Panel Frame
- Brass Inserts  
6-32 X 1/4 Thread  
(M3.5 x 6.3mm)  
4-40 X 1/4 (M3 x 6.3mm)  
(1120, 1150 only)
- Mounting Screws
- O-Ring (Panel Seal)
- Instruction Sheet

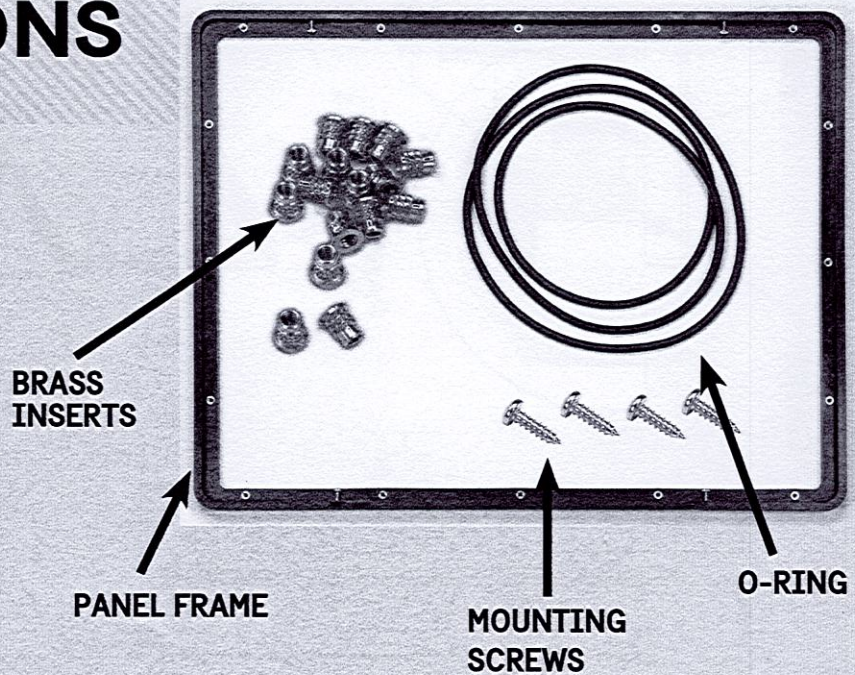

1. The frame must be correctly oriented prior to installation. Check for the model identifier and the word "front" (i.e.1450 front). The frame is to be installed with these characters closest to the front of the case. (If the frame is installed in reverse, the mounting screws will protrude through the case as they are oriented to match the external ribs).
2. To install the brass inserts, place the frame face down (model identifier facing down, see step 1). Place the non-shoulder small end of the insert into the hole and push in with a Phillips screwdriver until fully seated on the shoulder.
3. To secure the frame to the case, install the frame into the case until fully seated on the internal ribs. Next, insert a mounting screw (supplied with kit) into the hole and press firmly as you turn the screwdriver to start self-tapping. Continue to turn until fully seated or use a 90° drill motor.
4. Install the o-ring into the channel between the frame and the case. The o-ring must be fully seated. Install your custom panel. Your panel should completely cover the o-ring for maximum fluid and dust resistance. Install the screws (into brass inserts) by hand, **DO NOT APPLY PRESSURE**. The fit of the insert to frame was designed for easy installation without specialized tools (by hand). Excess pressure will push the brass inserts back out the other side.

**PROTECTOR CASES**  
23215 Early Avenue, Torrance, California 90505






**WARNING:** This product can expose you to chemicals including Lead and lead compounds, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**AVERTISSEMENT:** Ce produit peut vous exposer à des produits chimiques, y compris les composés de plomb et de plomb, qui sont connus de l'État de Californie pour causer des cancers et des anomalies congénitales ou d'autres dommages à la reproduction. Pour plus d'informations, consultez le site [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**ADVERTENCIA:** Este producto puede exponerlo a productos químicos como, plomo y compuestos de plomo, que son conocidos por el Estado de California como causantes de cáncer y defectos congénitos u otros daños reproductivos. Para obtener más información, visite [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

**WARNUNG:** Dieses Produkt kann Ihnen Chemikalien einschließlich Blei und Bleiverbindungen aussetzen, die dem Staat Kalifornie bekannt sind, um Krebs und Geburtsschäden oder andere Fortpflanzungsschäden zu verursachen. Weitere Informationen finden Sie unter [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov).

REVISIONS			
REV.	DESCRIPTION	DATE	APPR/VD
PR	PRODUCTION RELEASE SEE ECO 06-030	2/27/2006	BT

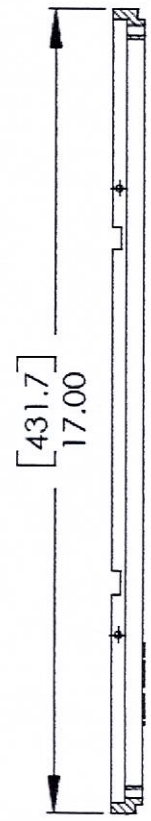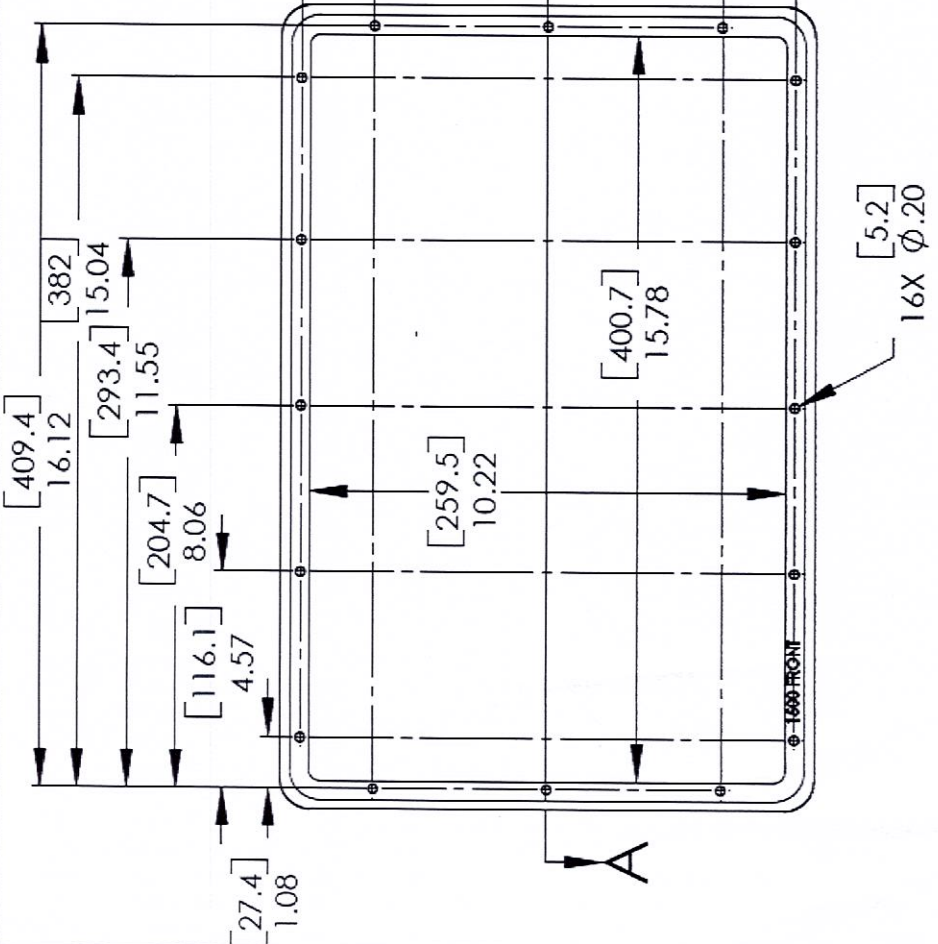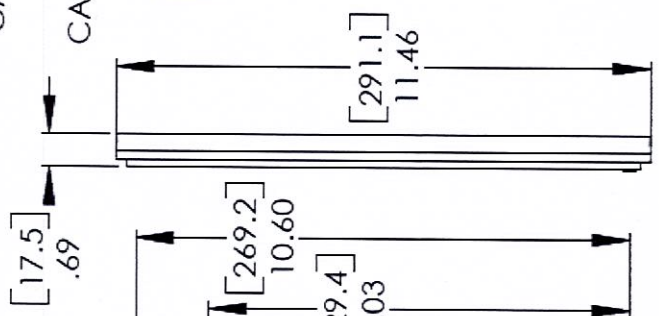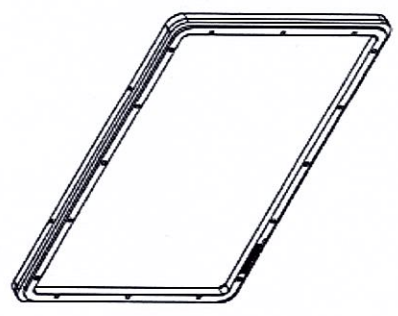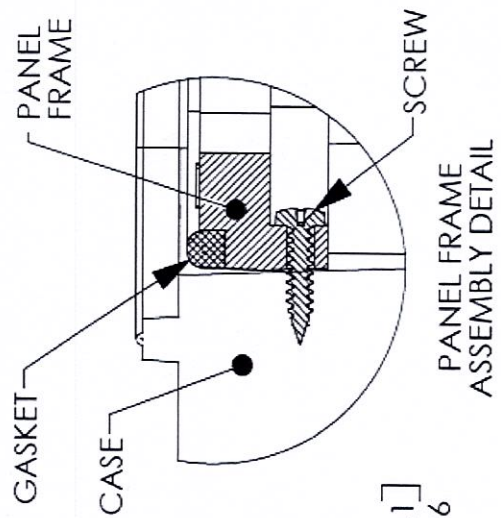

TITLE	1500	APPROVALS	DATE
PANEL FRAME INSTRUCTION SHEET		DRAWN	
		CHECK	
		APPR	
SIZE	MATERIAL	DRAWG #	REV
A	1 OF 1	1503-314-000	PR
DO NOT SCALE DRAWING			


1. DIMENSIONS IN [ ] ARE IN MILLIMETERS  
 NOTES: UNLESS OTHERWISE SPECIFIED.

# PANEL FRAME O-RING INSTALLATION

## MARCO DE INSTALACIÓN DE JUNTA TÓRICA

### CADRE DE PANNEAU INSTALLATION DE JOINT TORIQUE

#### RAHMEN DES O-RING INSTALLATION

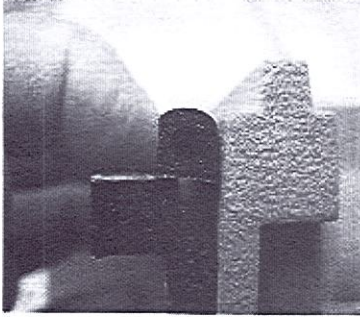


**1.** Lay the O-ring down along the case wall.

Disponga el lado plano a lo largo de la pared de la maleta.

Poser le côté plat le long de la paroi de la valise.

Legen Sie die flache Seite entlang der Kofferwand.

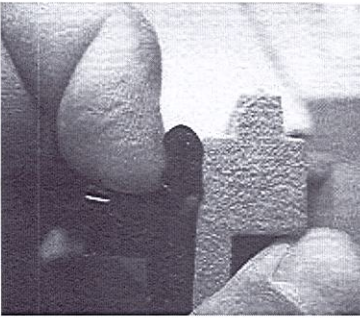


**2.** Squeeze and push the flat face of the o-ring into the o-ring channel.

Apriete y empuje la cara plana del anillo de sellado de neopreno hacia el interior del canal del anillo de sellado de neopreno.

Appuyer et pousser sur la face plate du joint torique pour le faire rentrer dans le canal du joint torique.

Drücken und schieben Sie die flache Seite des O-Rings in den O-Ring Kanal.

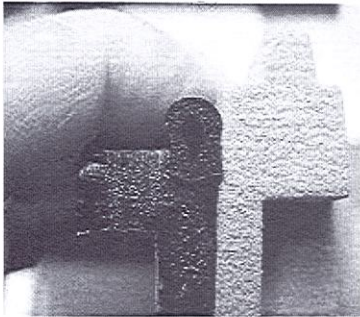


**3.** Fully install the o-ring.

Acabe de colocar el anillo de sellado de neopreno.

Installer totalement le joint torique.

Installieren Sie den O-Ring vollständig.

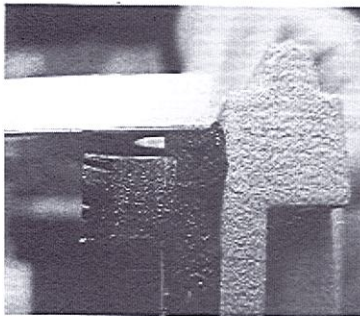

**4.** Install custom panel frame.

Coloque el panel de adaptación a medida.

Installer le support de platine personnalisé.

Installieren Sie den passenden Einbaurahmen

**Note:** Instructions for reference only.

**Remarque:** Instructions pour la référence seulement

**Nota:** Instrucciones para Sólo para referencia.

**Hinweis:** Anleitung nur als Referenz

23215 Early Avenue • Torrance, California 90505 USA  
Tel 310.326.4700 • FAX 310.326.3311

c/ Provença, 388, Planta 7 • 08025 • Barcelona, Spain • Tel: +34 934 674 999 • Fax: +34 934 877 393

